


# POU Water Dispenser

## Instruction manual

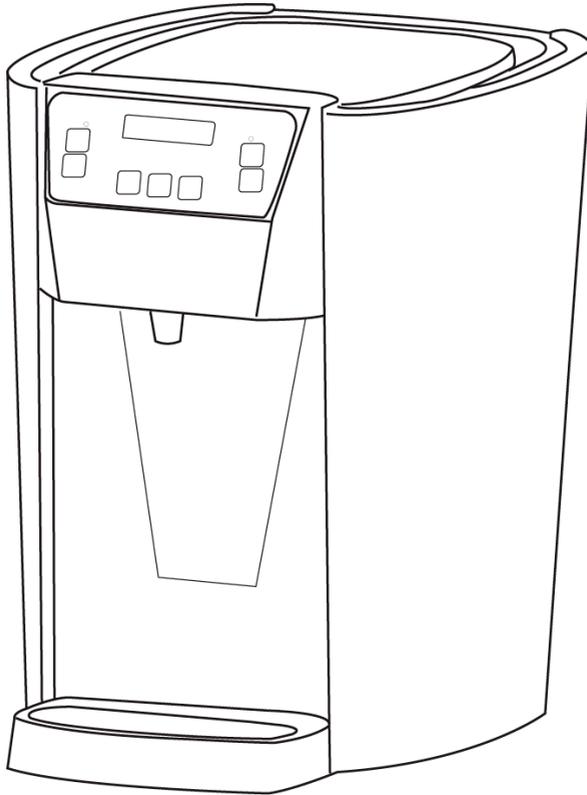

PLEASE READ THESE INSTRUCTIONS COMPLETELY  
BEFORE USING THIS PRODUCT.



THIS PRODUCT IS DESIGNED FOR HOUSEHOLD USE ONLY.

## **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed, including the following:


1. Read all instructions.
2. Do not let cord hang over edge of table or counter, or touch hot surfaces
3. To protect against electric shock, do not immerse cord, plug, or dispenser body in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning.
6. Do not operate any appliances with a damaged cord, plug or after the appliance malfunctions, or has been damaged in any manner.
7. The use of accessory attachments not recommended by the appliances manufacturer will void the warranty and may cause injuries.
8. Do not use outdoors.
9. To insure proper ventilation, maintain a minimum clearance of 4" (64mm) on sides and rear of cooler.
10. Install the water dispenser on a level counter. Do not install where it will be subject to direct sunlight, heat or moisture.
11. Do not install the water dispenser where the temperature will go below 59°F(15°C) or above 100.4°F(38°C).
12. To disconnect the power cord, turn the switch to "off", then remove plug from wall outlet.
13. Always wash and dry your hands thoroughly before touching the water dispenser.
14. Dispenser must have all liquid drained prior to moving.
15. Do not use this cooler to chill or heat any liquids other than potable water.
16. Do not use with water that is micro biologically unsafe or of unknown quality.
17. To reduce the risk of electric shock, this appliance has a power cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.
18. Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician install an outlet near the appliance.
19. Do not immerse the appliance in the water.

# SAVE THESE INSTRUCTIONS

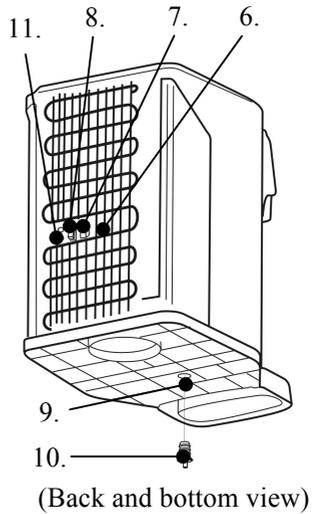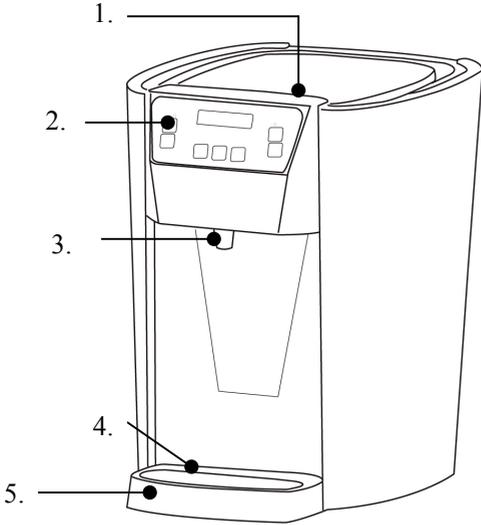


- |                    |                               |                 |
|--------------------|-------------------------------|-----------------|
| 1. POU Lid         | 2. Control Panel              | 3. Water Outlet |
| 4. Drip Tray Grill | 5. Drip Tray                  | 6. Power Inlet  |
| 7. Heating Switch  | 8. Control Buttons (Optional) | 9. Drain Valve  |
| 10. Drain Plug     | 11. Clean Button              |                 |

# CONTROL PANEL

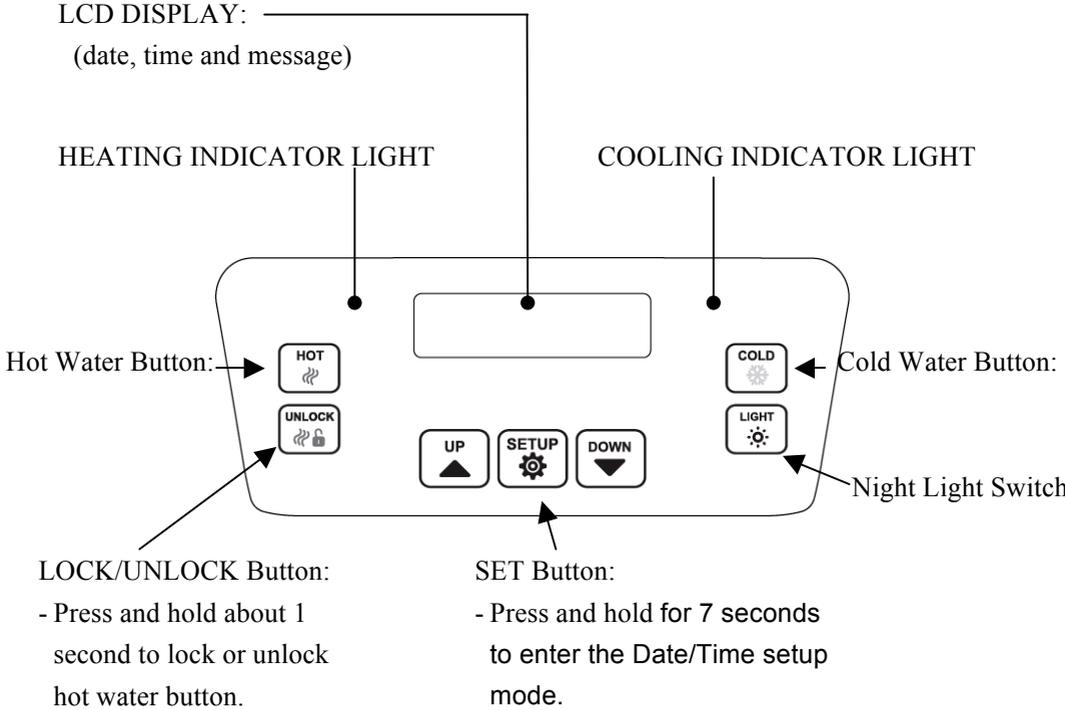

# WATER CONNECTION

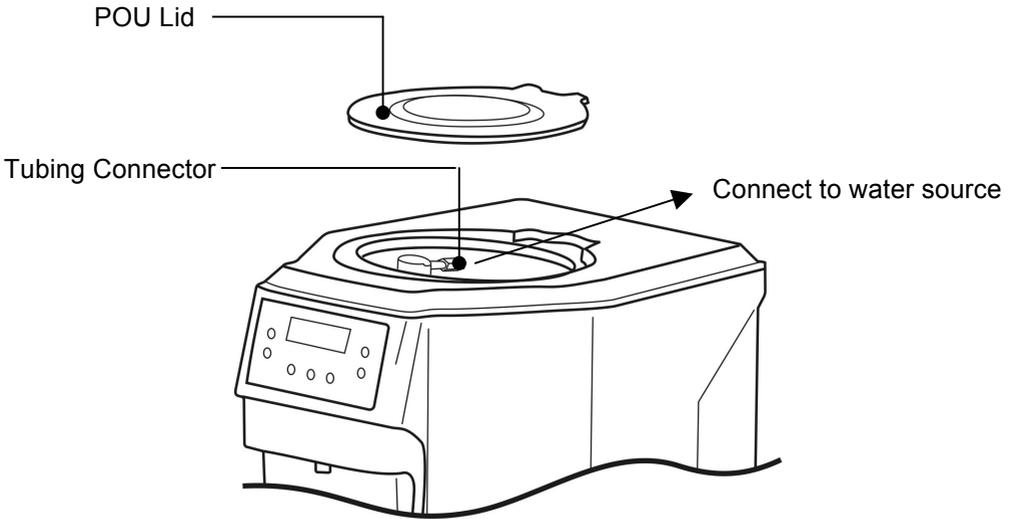

# INSTALLATION

1. Locate water cooler in a well-ventilated space, is on a level surface, where temperature is always above freezing.
2. Insure proper ventilation by maintaining a minimum clearance of 4" (64mm) on sides and rear of cooler.
3. Connect a 1/4" water supply line fitting into the tubing connector located under the POU Lid.
4. Follow filter system instructions to install the filtration system if the unit is connected to a water filter system.
5. Wait about 10 minutes for the cold tank to be fully filled (time may vary).
6. Verify that the heating switch on the back of the unit is off. Plug the power cord into an electrical outlet.
7. Press and hold the Lock/Unlock button and wait for beep and red light at Water Outlet (about 1 second). Place a container under the Water Outlet

then press and hold Hot Water button until a steady stream of water flows from Water Outlet.

8. Place a container under the Water Outlet. Press and hold Cold Water button until a steady stream of water flows from Water Outlet.
9. Turn on the Heating switch located on the back of the unit. Allow 40 minutes for water to reach hot and cold temperature and both heating indicating light and cooling indicating light stop flashing.

**NOTE:** Inlet water supply pressure should not exceed 85PSI.

# USING THE WATER DISPENSER

## Dispensing Water:

1. Place a glass or cup under the Water Outlet.
2. For hot water, press and hold the Lock/Unlock button and wait for beep and red light at the water outlet (about 1 second) then, press and hold Hot Water button. Release the button when the desired water volume is reached.
3. For cold water, press and hold Cold Water button. Release the button when the desired water volume is reached

## Date/Time Setting:

1. Press and hold the "SET" button for 7 seconds to enter the Date/Time setup mode.
2. When LCD display message shows "TIME", press "UP" or "DOWN" button to adjust the TIME setting.
3. When LCD display message shows "DATE", press "UP" or "DOWN" button to adjust the DATE setting.
4. Press the "SET" button to confirm the setting and go to the next setting item.
5. Setup mode will be exited automatically 15 seconds after the last button is pressed.

## Draining the dispenser:

1. Set Heating Switch (on the back of the dispenser) to "0"(off) position.
2. Unplug the power cord.
3. Let the unit cool before draining.
4. Disconnect water supply.
5. Take the dispenser to a sink or place a bucket beneath the Drain Hole.
6. Remove the Drain Plug from the Drain Hole and allow water to drain.

**CAUTION:** Water from Drain Hole may be hot.

7. After draining, replace the Drain Plug

**NOTE:** Always keep the Drain Plug in place after draining.

## Ozone Sanitization:

### **A. Auto Clean mode**

1. Setup the Auto Clean Start Time and Frequency through the feature setup menu described in page 4.
2. Sanitization cycle will automatically sanitize the system based on the setting. No user intervention is required after setup.

### **B. Manual Full Clean mode**

1. Press and hold the “Clean Button” on the back of the unit until a beep sound and white light is seen at Water Outlet (about 3 seconds) to start.
2. When Sanitization is activated, Hot Water Selector, Cold Water Selector and Water Dispense buttons are locked.
3. The sanitization cycle will stop automatically in about 1-2 hours.
4. To interrupt the sanitization, press and hold the “Clean button” and wait for a beep sound (about 3 seconds) and white light disappears at Water Outlet.
5. Drain the water after the clean cycle if desired.

# CLEANING

**CAUTION:** Set Heating Switch (on the back of the dispenser) to "0"(off) position and unplug the power cord before cleaning.

Sweep away or vacuum any dust from the condenser coils on the back of the unit. For best results, use a brush specially designed for this purpose. It is available at most appliance stores.

## **ALL PLASTIC PARTS ARE DISHWASHER SAFE**

POU Lid, drip tray/drip tray grill and shell can be cleaned with any non-abrasive household cleaner.

To prevent damage to plastic parts, avoid any abrasive cleaning aids.

# MAINTENANCE

**Condenser:** To ensure optimum cooler performance, condenser must be maintained free of dust and lint. Condenser must be regularly inspected and cleaned with brush.

**Drip Tray:** The drip tray is not self draining. The drip tray should be emptied and cleaned regularly. To remove, pull tray straightforward from the cabinet.

**Storage/Return Shipment:** If the cooler is removed from service, the water must be completely drained from the system.

# WARNING

This appliance is not intended for use by any person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



## **Environment friendly disposal**

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.